

LifeFitness[™]

Pedometer/Heart Rate Watch

USER MANUAL

Watch Activation


1. Before using your watch, remove the LCD display sticker that is affixed to the watch face.
2. To conserve power, the watch has been set to Power Off Mode. To activate the watch, simply press any button (except the Light button).



Table of Contents

Setting Your Personal Information.....	4
How to Use Your Pedometer.....	5
Setting Pedometer Sensitivity Level.....	5-6
How to Measure Your Heart Rate.....	6-7
About Relative Heart Rate.....	7-8
About the Heart Rate Target Zone and Alert.....	8
Setting the Standard Heart Rate Target Zone.....	9
Setting the Heart Rate Target Zone Manually.....	9
Setting the Heart Rate Alert Feature ON/OFF.....	10
Setting Resting Heart Rate.....	10
Helpful Hints in Measuring Heart Rate.....	11
Setting Time and Date.....	12
Setting Alarm and Hourly Chime Alert.....	12-13
How to Use Your Chronograph.....	13
How to Set Your Countdown Timer.....	13
How to Use Your Countdown Timer.....	14
How to Set Dual Time.....	14
Care and Maintenance.....	14-15
Specifications.....	15-16
Battery.....	16-17
Power Off Mode.....	17
How this Pedometer/Heart Rate Watch Works.....	17-18
Patents.....	18
Limited One (1) Year Warranty.....	18-19
Limitations.....	19
Disclaimer.....	20
Contact Information.....	21-22

Operation Overview

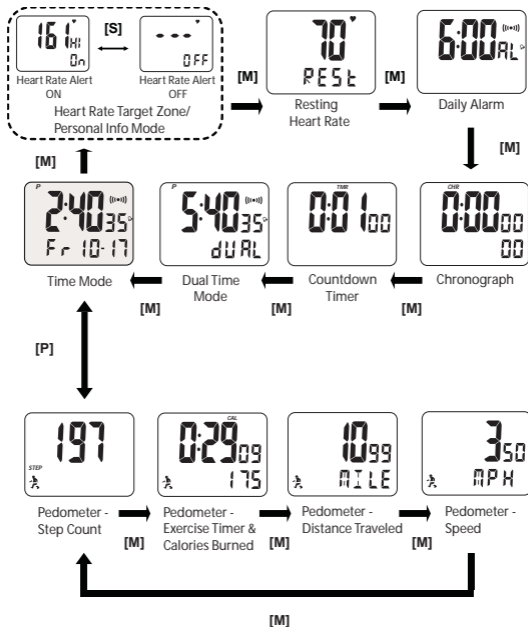

Setting Your Personal Information

In order to use your pedometer properly and ensure accurate data, you must first set your personal information.

1. In Heart Rate Target Zone/Personal Info mode, hold **Mode** for 3 seconds until the display flashes.
2. Press **Mode** to advance thru settings:
 - Target Zone Upper Limit (Hi)
 - Target Zone Lower Limit (Lo)
 - Age
 - Gender (male/female)
 - Unit format (Imperial/Metric)
 - Weight (lb/kg)
 - Height (in/cm)
 - Walk Stride Length (in/cm)
3. Edit these settings by using **Start/Stop** or **Reset**.
4. To save the new settings, hold **Mode** for 3 seconds.

☛ *Calculate your average stride length when you walk so the watch can accurately determine the distance and speed traveled. To calculate your average stride length, walk ten steps. Then measure the distance traveled (in or cm) and divide it by ten. This is your average walking stride length.*

How to Use Your Pedometer

1. In Time mode, press **Reset** to switch to Pedometer mode.
2. Press **Start/Stop** to start and stop the pedometer count.
3. Press **Mode** to advance thru features:
 - Step Count
 - Exercise Timer & Calories Burned
 - Distance Traveled
 - Walking/Running Speed
4. To reset the pedometer count and data, advance to the Step Count feature. Hold **Reset** for 3 seconds (the pedometer must be stopped). It will ask if you wish to “Reset.” Select YES or NO by pressing **Start/Stop** or **Reset**. Selecting NO resumes Pedometer mode with all previous data. Selecting YES resets the pedometer count to zero and all data will be erased.
5. After YES or NO has been selected, press **Mode** to continue and return to Pedometer mode.
6. When you are finished in Pedometer mode, press **Reset** to switch back to Time mode.

Setting Pedometer Sensitivity Level

To set the sensitivity level (Hi or Lo), the pedometer must be stopped.

1. In Pedometer mode, hold **Mode** for 3 seconds until the display flashes.
2. Choose *Hi* or *Lo* by using **Start/Stop** or **Reset**.
3. To save the new settings, hold **Mode** for 3 seconds.

How to Measure Your Heart Rate

To get your heart rate reading, follow these three simple steps:

1. Strap the watch snugly around your wrist.
2. Place your finger on the watch's sensor (**Heart Rate Sensor Button**) and press gently for 3-8 seconds.
3. Once detected, a beep tone sounds and your heart rate will be displayed in beats per minute (bpm). It's that easy!



The Pedometer/Heart Rate Watch is a sensitive monitoring device that reads your heart rate signals and reading times may vary. If you don't get a reading in 3-8 seconds, wait a couple of minutes and try again. This gives the watch a chance to settle in and pick up your electrical signals.

Your heart rate will be displayed once measured, and will remain displayed for 6 seconds after you release the **Heart Rate Sensor Button**. You can receive a continuous heart rate reading if you continue to hold down the **Heart Rate Sensor Button** after your initial reading.

☛ **The watch buttons and heart rate function are not intended for use in or under water.**

About Relative Heart Rate

Relative Heart Rate is your current heart rate divided by your maximum heart rate, and can be a useful reference to manage how hard you are working during your exercise.

- Maximum Heart Rate is calculated as: $220 - \text{your age}$.
- Your Relative Heart Rate will be displayed as a percentage when displaying your heart rate.

☛ *Example of Relative Heart Rate:*

Tom is 30 years old.

Maximum Heart Rate: $220 - \text{age } 30 = 190 \text{ bpm}$.

*His current heart rate measured at: **133 bpm**.*

$133/190 = 70\%$ is Tom's Relative Heart Rate.

About the Heart Rate Target Zone and Alert

The Heart Rate Target Zone feature helps you compare your acquired heart rate with your targeted heart rate zone.

- **If your heart rate is within the target zone**, the watch will beep once and display your heart rate.
- **If your heart rate is lower** than your target zone lower limit, the watch will beep twice and your heart rate will be displayed with an “**L**” (L = Low).
- **If your heart rate is higher** than your target zone upper limit, the watch will beep twice and your heart rate will be displayed with an “**H**” (H = High).

☛ Example: *Debbie's target zone is 80 bpm - 120 bpm. After 5 minutes of walking, Debbie measures her heart rate.*

If Debbie's heart rate is “L 72”, she can decide to pick up her pace so her next reading falls within her target zone.

Setting the Standard Heart Rate Target Zone

By entering your age and gender, the watch will automatically calculate your standard heart rate range.

1. In Heart Rate Target Zone/Personal Info mode, hold **Mode** for 3 seconds until the display flashes.
2. Press **Mode** to advance thru settings:
 - Age
 - Gender (male/female)
3. Edit these settings by using **Start/Stop** or **Reset**.
4. To save the new settings, hold **Mode** for 3 seconds.

Setting the Heart Rate Target Zone Manually

You can manually override the standard heart rate settings to those of your own preference.

1. In Heart Rate Target Zone/Personal Info mode, hold **Mode** for 3 seconds until the display flashes.
2. Press **Mode** to advance thru settings:
 - Target Zone Upper Limit (Hi)
 - Target Zone Lower Limit (Lo)
3. Edit these settings by using **Start/Stop** or **Reset**.
4. To save the new settings, hold **Mode** for 3 seconds.

Setting the Heart Rate Alert Feature ON/OFF

While in Heart Rate Target Zone/Personal Info mode, press **Start/Stop** to toggle the Heart Rate Alert function ON or OFF.

• **When OFF**, your upper and lower limits will be 'hidden' and your Heart Rate Alert function will be disabled.

• **When ON**, your upper and lower limits will appear in the display and your Heart Rate Alert function will be enabled.

Setting Resting Heart Rate

The Resting Heart Rate feature can be used as a reference to inform you of your progress. The lower your resting heart rate becomes, the healthier *you* become.

1. In Resting Heart Rate mode, hold the **Heart Rate Sensor Button** for 3-8 seconds until your heart rate is acquired.
2. A beep tone sounds and your resting heart rate will be displayed and recorded.

• *It is recommended to obtain your resting heart rate when waking up from sleep. This will ensure the most accurate reading for a resting heart rate.*

Helpful Hints in Measuring Heart Rate

If you are having difficulty measuring your heart rate, you may want to try the following steps. Try each of these in succession until you are able to measure your heart rate:

1. Make sure the watch is snugly strapped to your wrist. A loose fit makes it more difficult to properly measure your heart rate. *Stop if OK or ↓*
2. When pressing on the sensor, make sure you are using the soft, flat pad of your finger, not the tip of your finger. *OK or ↓*
3. Press gently with enough pressure to activate the heart rate measure mode. Muscle 'noise' from pressing too hard can make it difficult to measure your heart rate. *OK or ↓*
4. Make sure the metal back of the watch is laying flat on your skin. *OK or ↓*
5. Make sure your wrist and fingers are clean and free from dirt, oils, or lotions. *OK or ↓*
6. Stay still, and relax your arms on a stable surface while taking your heart rate. *OK or ↓*
7. Clean the front sensor and back metal plate with a mild soap and water or similar cleaning solution. *OK or ↓*
8. Moisten, with water, the pad of the finger you are using to contact the sensor on the face of the watch. *OK or ↓*
9. Moisten, with water, the surface between the back metal plate of the watch and the skin on your wrist.

Setting Time and Date

1. In Time mode, hold **Mode** for 3 seconds until the display flashes.
2. Press **Mode** to advance thru settings:
 - Seconds
 - Minutes
 - Hours
 - Year
 - Month
 - Day
 - Month/Day format
 - 12/24 hr format
 - Key Beep
3. Edit these settings by using **Start/Stop** or **Reset**.
4. To save the new settings, hold **Mode** for 3 seconds.

Setting Alarm and Hourly Chime Alert

1. In Alarm mode, hold **Mode** for 3 seconds until the display flashes.
2. Press **Mode** to advance thru settings:
 - Minutes
 - Hours
3. Edit these settings by using **Start/Stop** or **Reset**.

4. To save the new settings, hold **Mode** for 3 seconds.
- ☛ *In Alarm mode, press **Start/Stop** to toggle the Alarm alert ON/OFF; press **Reset** to toggle the Hourly Chime alert ON/OFF.*

How to Use Your Chronograph

1. In Chronograph mode, press **Start/Stop** to begin timing.
2. Press **Start/Stop** again to stop timing.
3. To reset the chronograph, press **Reset** (the chronograph must be stopped).

How to Set Your Countdown Timer

1. In Countdown Timer mode, hold **Mode** for 3 seconds until the display flashes.
2. Press **Mode** to advance thru settings:
 - Seconds
 - Minutes
 - Hours
3. Edit these settings by using **Start/Stop** or **Reset**.
4. To save the new settings, hold **Mode** for 3 seconds.

How to Use Your Countdown Timer

1. In Countdown Timer mode, press **Start/Stop** to begin the timer.
2. Press **Start/Stop** again to stop the timer.
3. To reset the countdown timer, press **Reset** (the timer must be stopped).

How to Set Dual Time

Dual Time is the watch's secondary form of time.

1. In Dual Time mode, hold **Mode** for 3 seconds until the display flashes.
2. Press **Mode** to advance thru settings:
 - Hours
 - Minutes
3. Edit these settings by using **Start/Stop** or **Reset**.
4. To save the new settings, hold **Mode** for 3 seconds.

Care and Maintenance

To ensure proper function of your Pedometer/Heart Rate Watch:

- Avoid rough usage or severe impacts to the watch
- Keep the front sensor and back metal plate free from dirt, oils, or other contaminants.
- Periodically clean the watch with a soft cloth, mild soap and water, or similar cleaning solution.
- Keep the watch out of extreme heat or cold.
- Do not expose the watch to intense direct sunlight for long periods of time.
- Do not expose the watch to chemicals such as gasoline, alcohol, or solvents.

Specifications

Pedometer

Displayable Step Range: 0-999999 steps

Exercise time: 99 hours, 59 minutes, 59 seconds

Maximum Distance: 0-400 km/ 0-248.55 miles

Maximum Speed: 36 km/hour/ 22 mph

Calorie Range: 0-99999 calories

Pedometer Sensitivity: 2 levels

Heart Rate

Heart Rate Range: 43-200 BPM

Upper and lower limit heart rate zones/alerts

Percentage of maximum heart rate

Time

AM, PM, hour, minute, second

12/24 hour format

Calendar: month, date, day display with auto leap year adjustment

Dual time

Alarm

One (1) alarm time
Hourly chime
Alarm duration: 30 seconds

Chronograph

Resolution: 1/100 second
Measuring range: 99 hours, 59 minutes, 59 seconds

Countdown Timer

Resolution: 1 second
Measuring Range: 99 hours, 59 minutes, 59 seconds

Other

Electroluminescent (EL) backlight
Water resistant up to 50 meters
Key beep ON/OFF

- ***The watch buttons and heart rate function are not intended for use in or under water.***

Battery

Battery replacement will be required from time to time, and should occur when:

- The display fades in part or completely
- The Heart Rate function will not activate

The battery life will vary depending on usage of the light, heart rate and pedometer features (which require high power consumption).

To replace the battery of your Pedometer/Heart Rate Watch, we recommend this be done by a watch repair service center. This will ensure the water resistance will be retained after battery replacement.

The watch uses one (1) standard lithium replacement battery: **CR2032**

Power Off Mode

To conserve the battery's lifetime during long periods of inactivity, hold the "**Mode**", "**Start/Stop**" and "**Reset**" buttons for 3 seconds. The watch will turn off and enter Power Off Mode. To activate the watch again, simply press any button (except the Light button).

☛ **CAUTION:** *Entering Power Off Mode will reset the watch and all of its data.*

How this Pedometer/Heart Rate Watch Works

The **S-Pulse™** technology measures the electronic signals that pass through your body as a result from the beating of your heart. This measurement is obtained by the watch's two sensors. The back metal plate of the watch is actually the primary sensor that measures these electronic signals off your arm.

The heart rate measurement is done when you place your finger from one hand on the sensor button on the watch attached to your opposite arm. This creates a loop across your body the watch can now read.

The digital pedometer is powered by a motion-sensing accelerometer, considered the most accurate and reliable way to track your steps.

Patents

The Pedometer/Heart Rate Watch and **S-Pulse™** technology are a result of, and protected by, the following **Salutron, Inc.** patents:

US: 5,738,104 & 5,876,350

Europe: EPO 0861045B1

Limited One (1) Year Warranty

Your Pedometer/Heart Rate Watch is warranted for a period of **one (1) year** from the date of purchase from an authorized retailer.

If defective, return the watch with the original receipt, or copy, to your original retailer or to Life Fitness for a **replacement watch.**

This warranty covers defects in materials and workmanship only. It does not cover the battery, damage due to abuse or misuse, accidents, or any commercial use.

Limitations

The warranty stated above is the only warranty applicable to this product. All other warranties, expressed or implied, including all implied warranties of merchantability or fitness for a particular purpose, are hereby disclaimed. No verbal or written information given by Life Fitness, its agents or employees shall create a guarantee or in any way increase the scope of this warranty.

Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. Life Fitness shall not be liable for incidental or consequential damages resulting from the use of this product or arising out of any breach of any express or implied warranty on this product. Except to the extent prohibited by law, any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above. Consumer rights may vary from state to state.

Disclaimer

The Pedometer/Heart Rate Watch is not a medical device, nor intended for use in medical or patient monitoring applications. It is not intended for use in any commercial application.

Always consult a physician before starting any physical activity.

The features/images of your watch may vary slightly from those described in this Instruction Manual. The information in this manual is intended to be for information purposes only, and is subject to change without notice.

S-Pulse is trademark of Salutron, Inc.

Contact Information

For Product Service in the US:

Life Fitness US

Telephone (+1) 847.451.0036

Fax: (+1) 847.288.3702

Toll-Free Telephone: 800.351.3737

For Product Service Internationally:

Life Fitness Europe GmbH

Telephone: (+49) 089.317.751.66

Fax: (+49) 089.317.751.38

Life Fitness (UK) LTD

Telephone: (+44) 1353.665507

Fax: (+44) 1353.666018

Life Fitness Atlantic BV

Life Fitness Benelux

Telephone: +31 (0) 180.64.66.66

Fax: +31 (0) 180.64.66.99

Life Fitness Italia S.R.L.

Telephone: (+39) 0472.835.470

Fax: (+39) 0472.833.150

Toll-Free Telephone: 800.438836

Contact Information

For Product Service Internationally:

Life Fitness Vertriebs GmbH

Telephone: (+43) 1615.7198

Fax: (+43) 1615.7198.20

Life Fitness Asia Pacific Ltd

Telephone: (+852) 2891.6677

Fax: (+852) 2575.6001

Life Fitness Latin America and Caribbean

Telephone: (+1) 847.288.3964

Fax: (+1) 847.288.3886

Life Fitness Brazil

Telephone: (+55) 11.7295.2217

Fax: (+55) 11.7295.2218

Life Fitness Japan

Telephone: (+81) 3.3359.4306

Fax: (+81) 3.3359.4307

Life Fitness Iberia

Telephone: (+34) 93.672.4660

Fax: (+34) 93.672.4670

Copyright © 2009 Life Fitness. All rights reserved.
Duplication or copying of all or part of this manual without
the express written consent of Life Fitness is prohibited.